



Televes reserves the right to modify the product

NanoKom mast amplifier (LTE790, 1st Digital Dividend) 3 inputs: UHF-UHF-SATmix

Masthead amplifier for the amplification and combination of terrestrial and satellite television signals coming from several antennas.

Equipped with 3 inputs: the signals on both UHF inputs are amplified, whereas the SAT signal is only combined.

Allows DC pass towards the satellite input to power the LNB.

Ref.561401

Art.Nr	MVMS32DCLTE
EAN13	8424450188378

Highlights

- Separate amplification and very low noise figure, thus respecting signal quality
- Ultra-small ergonomic design
- EasyF connection system
- Can be powered in the 12 V-to-24 V range
- Fully automated manufacturing, subject to the most stringent quality controls
- High-screening Zamak chassis

Main features

- LTE filter to remove mobile phone interference
- ON/OFF switch to allow DC pass towards one of the UHF inputs for the powering of a BOSS system
- Easy mounting. Equipped with a clamp for mast mounting
- Resistant ABS-plastic orange case for outdoor installation

Discover



EasyF connection system: simplicity and savings

EasyF is an innovative connection concept where the inner conductor of the coaxial cable is directly inserted in the device, thus improving connection reliability. Thanks to the absence of F connectors, the chassis can be reduced and the connection of two cables secured with a single screw.

- Real time savings: speeding the installation is possible without the need for coaxial cable termination. Furthermore, there is no need for screwing the connectors on the device, which is sometimes difficult when there is little room
- Connection reliability: the clamp holding the cables prevents the coaxial cable to come off
- Cost savings: no additional connectors are required (neither F nor IEC)
- Space optimization: inputs and outputs are always on the same side of the device to prevent coaxial cables from bending, and to make working inside cabinets and register boxes easier
- Very easy three-step mounting: only screwing and unscrewing the covers is required to connect both cables:
- 1. Unscrew the device's cover to access the connection
- 2. Insert the previously stripped coaxial cables
- 3. Close the cover and screw to ensure connection

Learn more about EasyF system reliability


With EasyF, the connection between the coaxial cable and the device is carried out using an automated system for contact insertion of the inner conductor, without any soldering.

- Always as new: the device's operating life increases when the factor of solder wearing out with time is removed
- Failure rate reduction: usually produced as a result of cold soldering joints
- Electromagnetic behaviour optimization: for high frequencies
- Our commitment with environment is reinforced: pollution caused by the welding process is eliminated and production power consumption is reduced



Application example

(Click to see the picture)

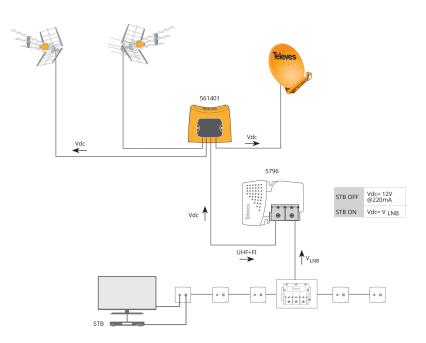



Technical specifications

1		
Bands		UHF SAT
Frequency range	MHz	470 790 950 2150
Gain	dB	28 -2.5
Gain adjustment range	dB	020
Output level DIN45004B	dBµV	108
Output level EN50083	dBµV	115
Noise figure	dB	6.5
Number of inputs		3
Inputs/Bands		UHF1 UHF2 SAT
Max current input	mA	0 40
Max current for LNB	mA	300
Powering	Vdc	12 24
Protection index (IP)		23
Operating temperature	°C	-5 45