

Televes reserves the right to modify the product

NanoKom mast amplifier (LTE700, 2nd Digital Dividend) 3 inputs: UHF- UHF-VHFmix

Masthead amplifier for the amplification and combination of terrestrial television signals coming from several antennas. Equipped with 3 inputs: the signals on both UHF inputs are amplified, whereas the VHF signal is only combined. The amplifier is powered through the output coaxial cable.

RED compliant.

Ref.561721

Art.Nr

MVM327LTE2

EAN13

8424450201725

Highlights

- Separate amplification and very low noise figure, thus respecting signal quality
- Ultra-small ergonomic design
- EasyF connection system
- Can be powered in the 12 V-to-24 V range
- Fully automated manufacturing, subject to the most stringent quality controls
- High-screening Zamak chassis

Main features

- LTE filter to remove mobile phone interference
- ON/OFF switch to allow DC pass towards one of the UHF inputs for the powering of a BOSS system
- Easy mounting. Equipped with a clamp for mast mounting
- Resistant ABS-plastic orange case for outdoor installation

Discover

EasyF connection system: simplicity and savings

EasyF is an innovative connection concept where the inner conductor of the coaxial cable is directly inserted in the device, thus improving connection reliability. Thanks to the absence of F connectors, the chassis can be reduced and the connection of two cables secured with a single screw.

- Real time savings: speeding the installation is possible without the need for coaxial cable termination. Furthermore, there is no need for screwing the connectors on the device, which is sometimes difficult when there is little room
- Connection reliability: the clamp holding the cables prevents the coaxial cable to come off
- Cost savings: no additional connectors are required (neither F nor IEC)
- Space optimization: inputs and outputs are always on the same side of the device to prevent coaxial cables from bending, and to make working inside cabinets and register boxes easier
- Very easy three-step mounting: only screwing and unscrewing the covers is required to connect both cables:

1. Unscrew the device's cover to access the connection

2. Insert the previously stripped coaxial cables

3. Close the cover and screw to ensure connection


Learn more about EasyF system reliability

With EasyF, the connection between the coaxial cable and the device is carried out using an automated system for contact insertion of the inner conductor, without any soldering.

- Always as new: the device's operating life increases when the factor of solder wearing out with time is removed
- Failure rate reduction: usually produced as a result of cold soldering joints
- Electromagnetic behaviour optimization: for high frequencies
- Our commitment with environment is reinforced: pollution caused by the welding process is eliminated and production power consumption is reduced

Application example

(Click to see the picture)

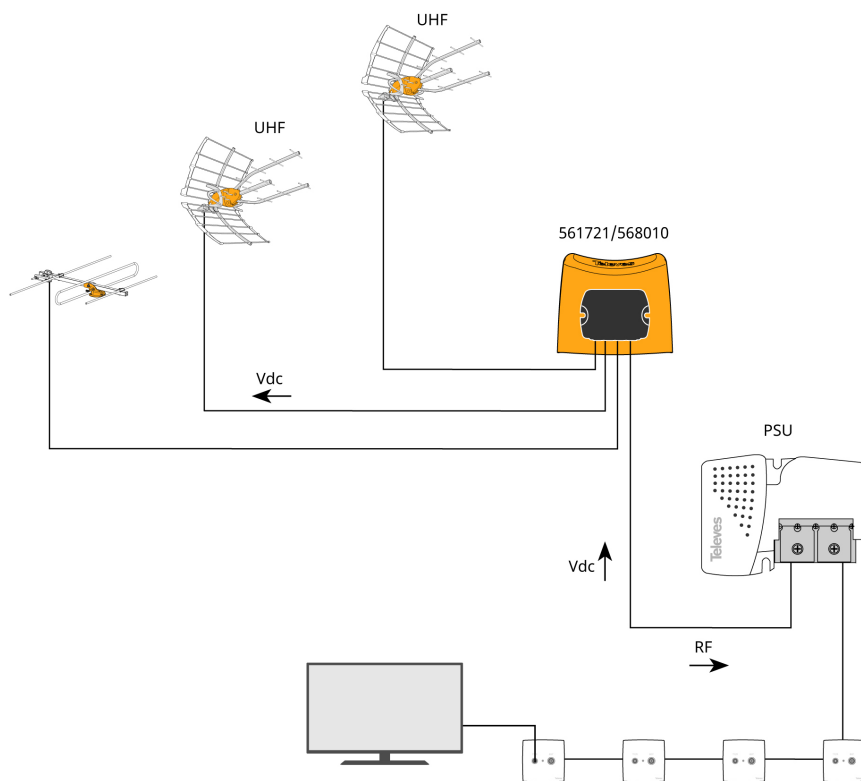

Technical specifications

Bands			VHF	UHF	
Frequency range	MHz	47 ... 254	470 ... 694		
Gain	dB	-1.5	28		
Gain adjustment range	dB	--	0 ... 20		
Output level DIN45004B	dBµV	--	108		
Output level EN50083	dBµV	--	115		
Noise figure	dB	--	6.5		
Number of inputs		3			
Inputs/Bands		VHF	UHF 1	UHF 2	
Max current input	mA	0	0	40	
Powering	Vdc	12 ... 24			
Protection index (IP)		23			
Operating temperature	°C	-5 ... 45			